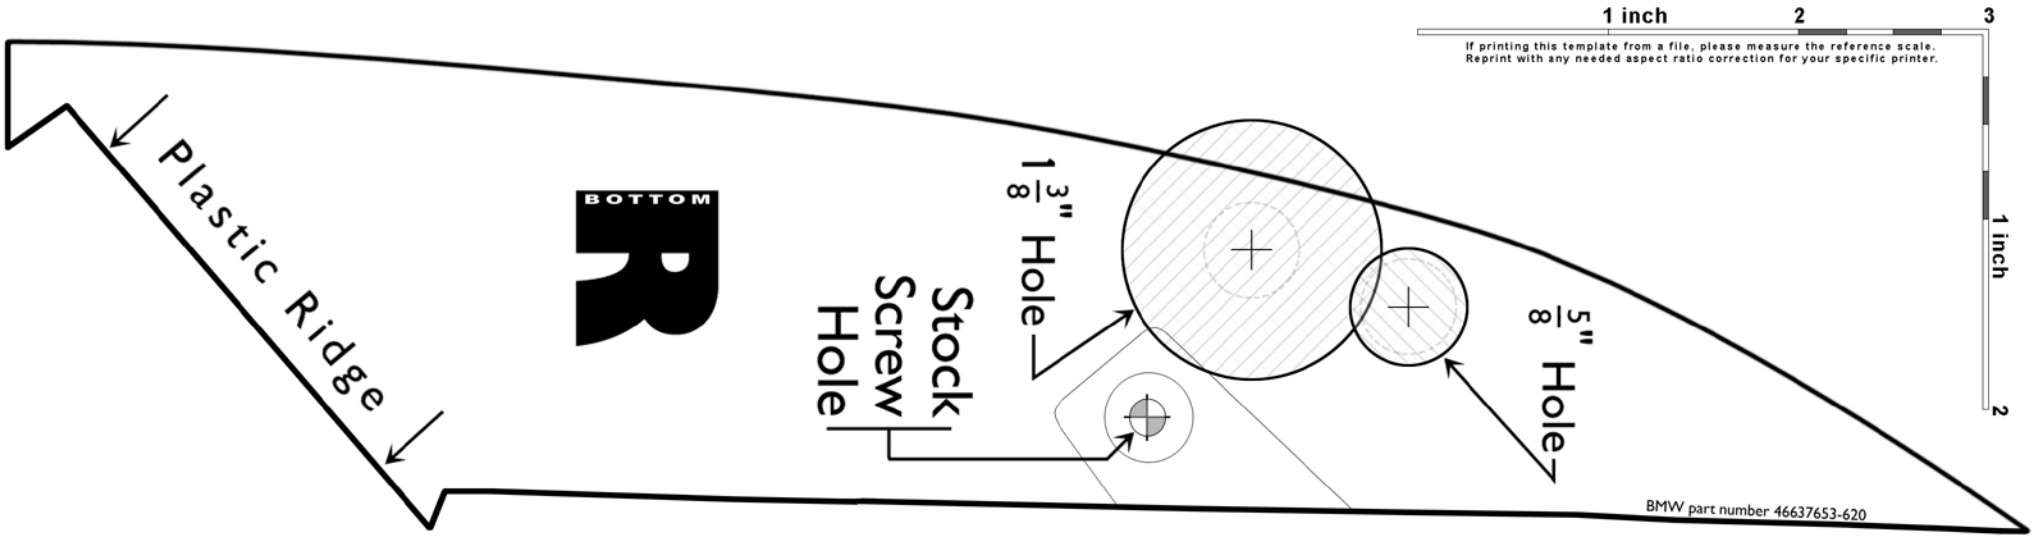

Important Note: Cut out templates and tape to ***bottom*** of the black plastic wings.
Drill two 1/2" positioning holes through the ***bottom*** surface ***only***.
Enlarge to final size after checking test fit and centering.

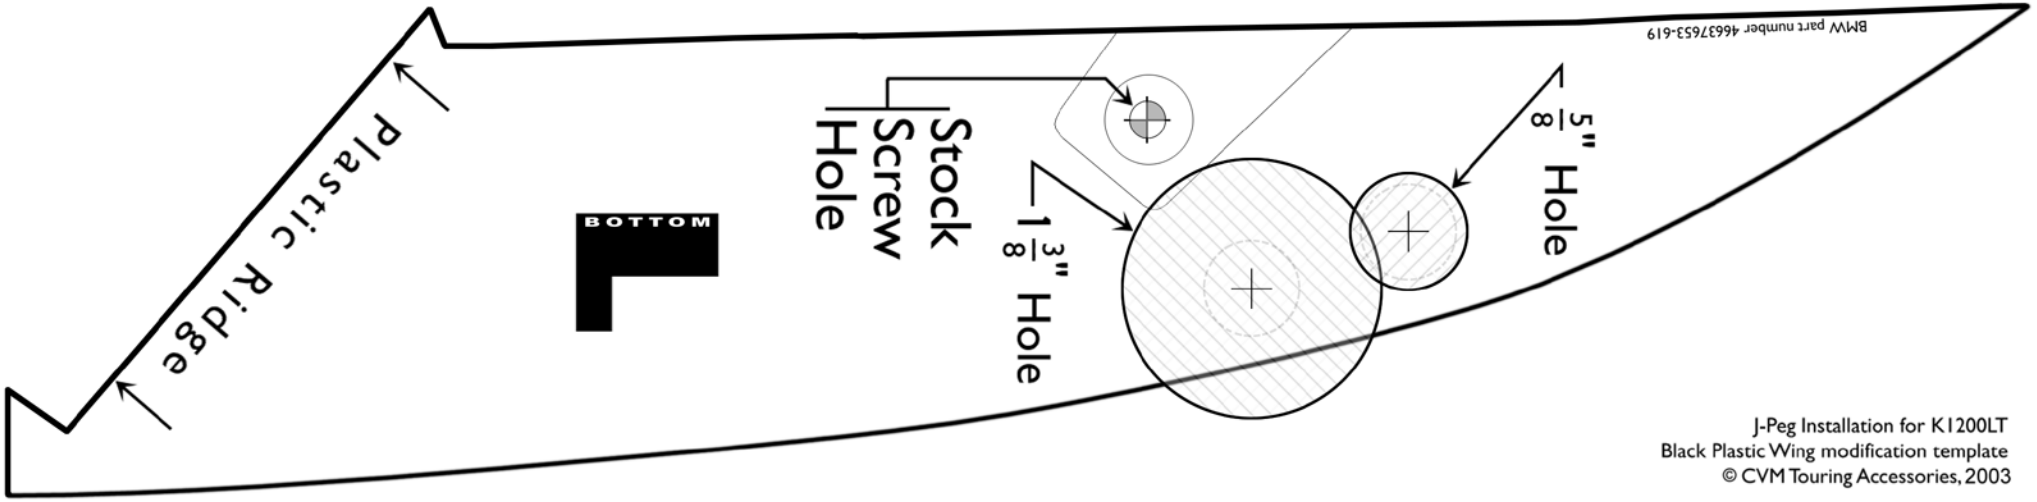

J-Peg Installation for K1200LT
Black Plastic Wing modification template
© CVM Touring Accessories, 2003